




## Open

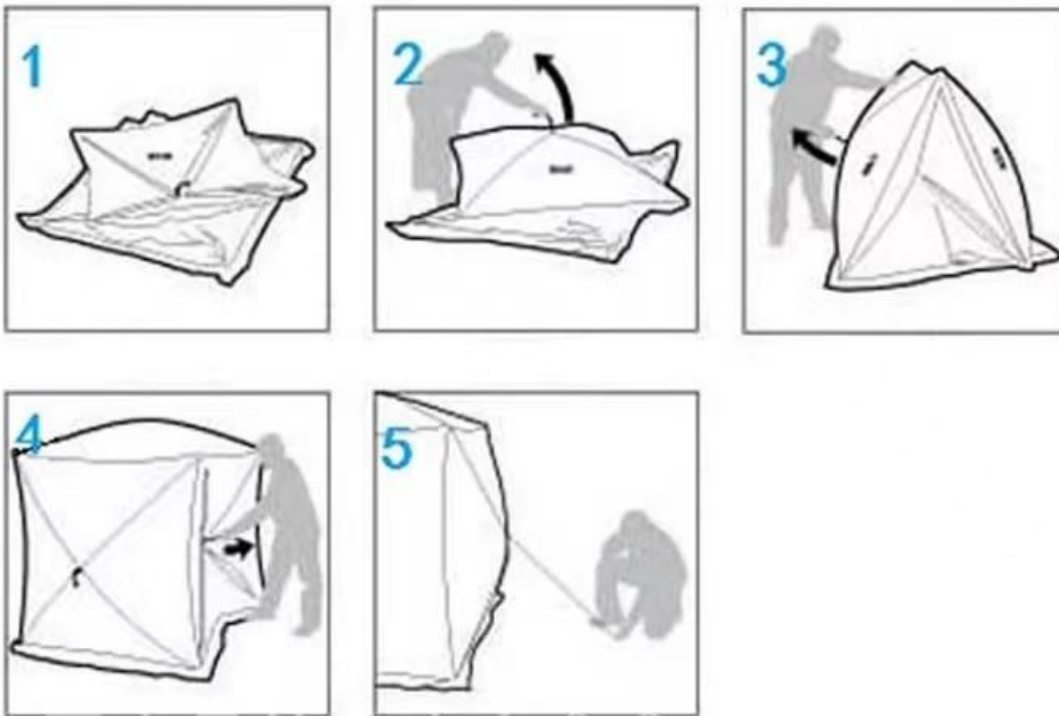

## SET-UP INSTRUCTIONS:

1. Remove the pop-up tent from the backpack carrying bag.
  2. Lay the pop-up tent flat on the ground and be completely sure there is no material twisted or overlapping the ends of any poles.(See Figure 1)
  3. Grab the pull handle on the eyelet located in the center of the roof and pull upward so the roof portion pops open.(See Figure 2)
  4. Lift the roof up so that you can grab any one of the handles located in the center of each wall. Grab the tie-down rope on the eyelet and pull out as you did in step 3.(See Figure 3)
- NOTE: Place your foot on the ground skirt to help hold the tent in place when popping open the walls.
5. Proceed by walking around the entire tent and pulling on each of the wall's tie-down ropes to pop out each wall until all sides are popped out.
  6. Your tent should be standing up completely. You may now proceed by anchoring the tent to the ground using the ground stakes and tie-down ropes provided. Ground stakes for your tent are located in a pouch inside the backpack carrying bag. The anchoring loops are sewn in each side wall. Use the provided tie-down ropes and tie free end to the ground stake.(See Figure 5)

## Pack up

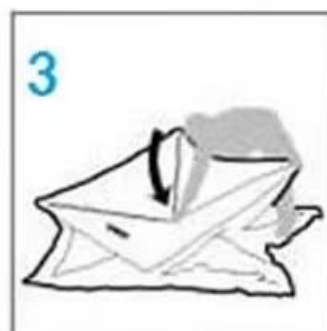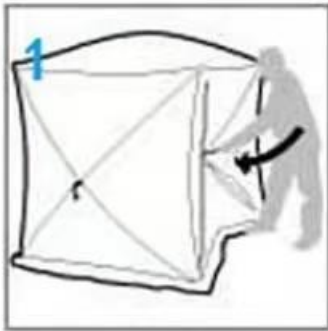

## TAKE-DOWN INSTRUCTIONS:

1. Remove all ground stakes and store them in the provided pouch (tie-down ropes should stay tied to the hub eyelets). Close all windows and ventilation holes.
2. Use your hand to push the center hub in on the roof and sidewalls until they collapse inward. (See Figure 1, 2 & 3)
3. The tent will be back in its flat stage just as it was when it was unfolded out of the backpack carrying bag. Gather all corners of the tent and fold together. (See Figure 4) Do not force the tent when folding. Watch for entanglement of poles.
4. Place the folded tent back into the backpack carrying bag.

## Maintenance Instructions:

1. Always put away the tent in dry condition to avoid mildew.
2. Take down the tent when not in use to avoid unnecessary damage and fading.
3. Use extra tie-down during excessive winds.

# Warning!

**THIS PRODUCT IS NOT FIREPROOF. THE FABRIC WILL BURN IF LEFT OR USED IN CONTINUOUS CONTACT WITH A FLAME SOURCE.**

**KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT. HEAT SOURCES BURN OXYGEN AND CARBON MONOXIDE. USE CAUTION WITH HEATERS AND VENT PROPERLY.**

1. Do not use candles, matches or open flames of any kind in or near this tent.
2. Build campfires downwind and several meters away from the tent and be sure to completely extinguish campfires before leaving a campsite or before going to sleep for the night.
3. Exercise with extreme caution when using fuel-powered lanterns or heaters inside a tent and use battery-operated lanterns whenever possible.
4. Extinguish or turn off all lanterns before going to sleep.
5. Do not refuel lamps, heaters or stoves inside this tent.
6. Do not smoke in this tent.
7. Do not store flammable liquids inside the tent.